





## Appendix V - Link to a weigh scale


1. Turn on the weigh scale you are trying to link to the stock recorder. Make sure it is close by.
2. On the stock recorder desktop find the computer icon. It may be called **My Device** or **My Computer**. Double tap the icon to open it.
3. A shortcut to the Bluetooth Manager is to tap the BT icon on the bottom taskbar.
4. Double-tap **Control Panel** to open it.

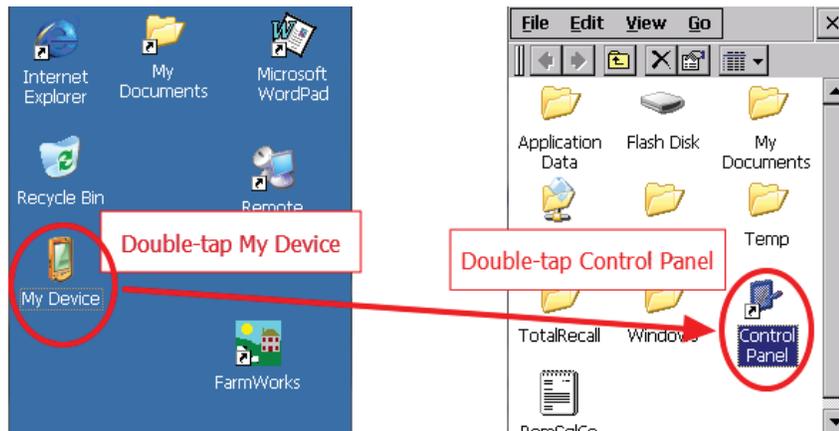

5. Find the Bluetooth symbol. It may be an icon or it may be in a list of folders. Double-tap to open **Bluetooth Device Properties**.

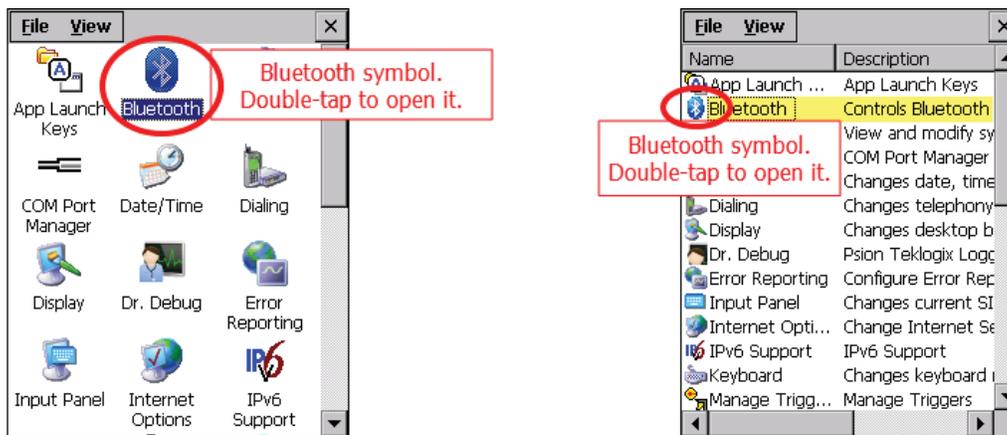


**Note:** You can also open the Bluetooth Manager by clicking on the little icon on the bottom tool bar.

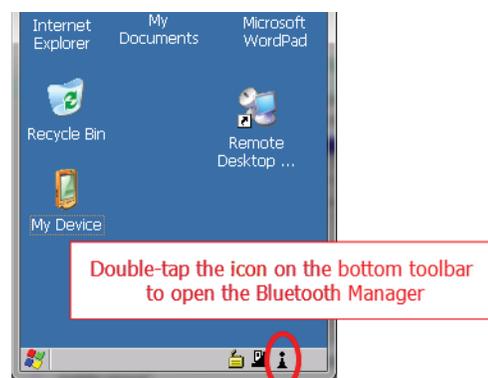



## Appendix V - Link to a weigh scale



- On the devices tab press **Scan**. Now the stock recorder tries to find all the Bluetooth devices in the area. This may take a few minutes - be patient!

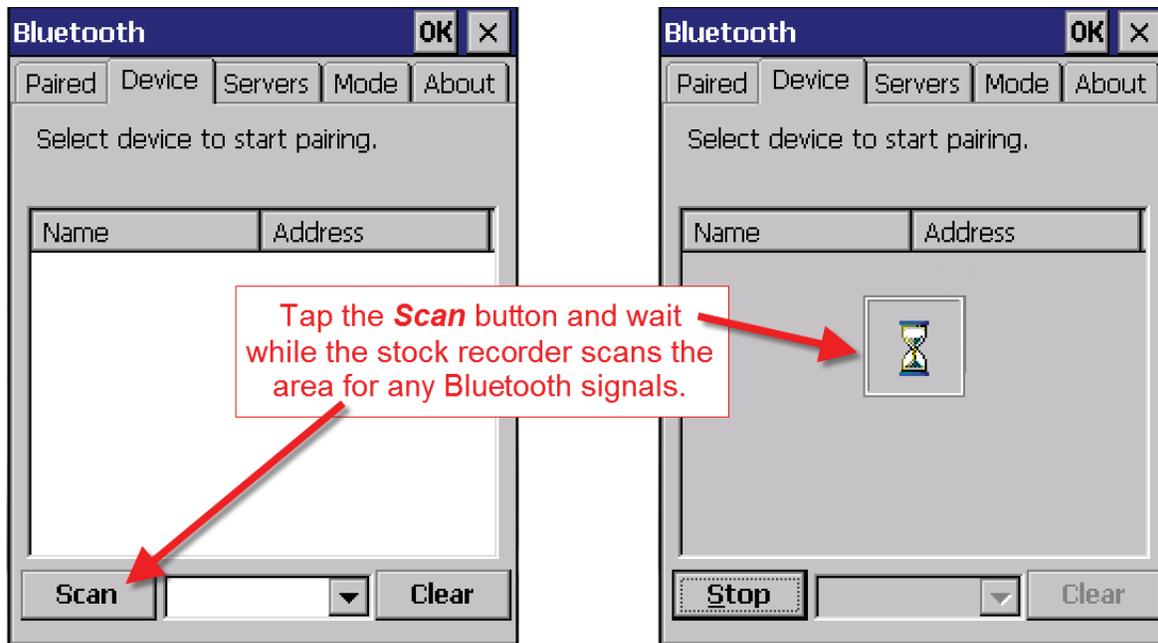



- When scanning is complete the screen will show all the Bluetooth devices in the area, including mobile phones.
- Your weigh scale name should appear - a Tru-Test scale might be called ID3000 or EziWeigh; a Te Pari scale will be called iScale. Highlight the name of your scale and tap **Pair**.
- The Authentication screen opens. Leave the passcode blank and tap **Next**.

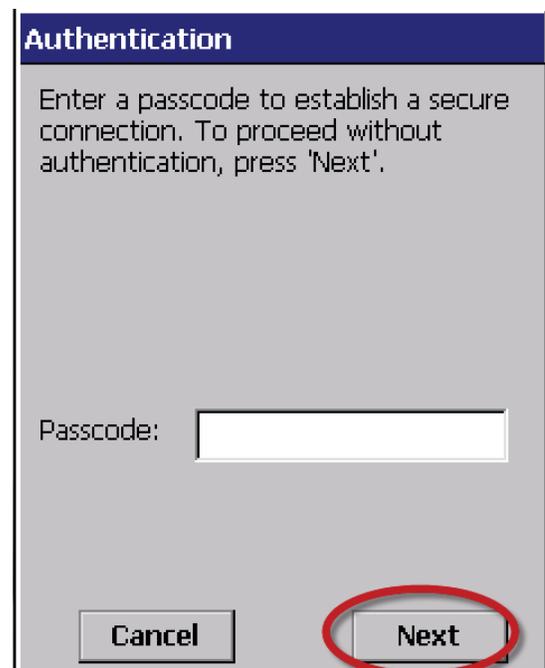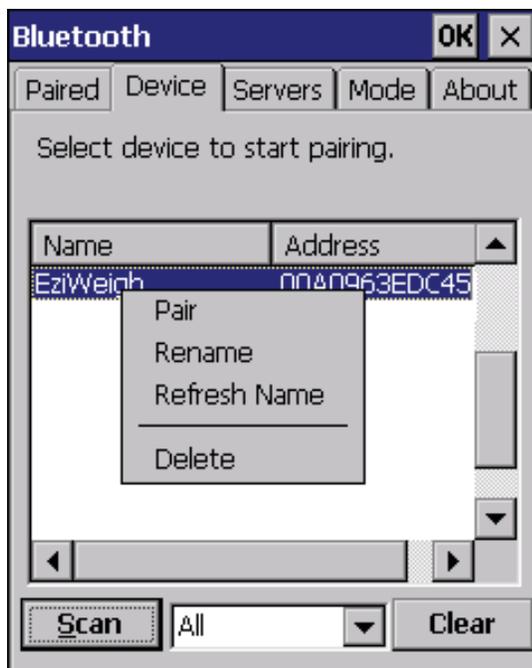




## Appendix V - Link to a weigh scale



- The **Services** screen will open. Tap in the **Serial Port** tick box.
- The **Serial Profile** screen will open. Leave **Encryption** disabled. Leave **Mode** as serial.

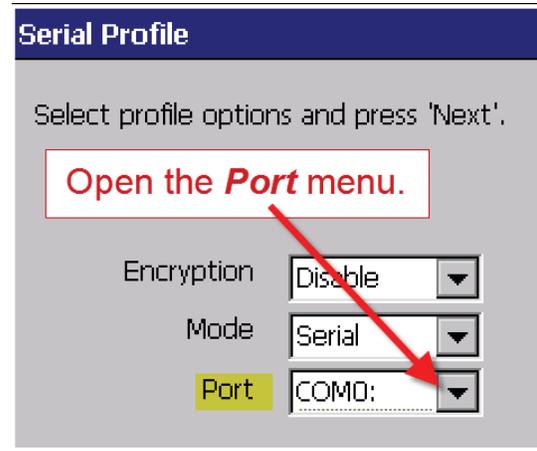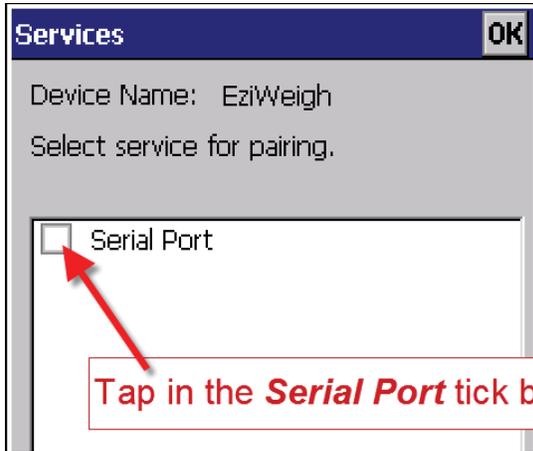

- Open the **Port** menu. Find the next available BSP after BSP 1. Make a note of the BSP number.

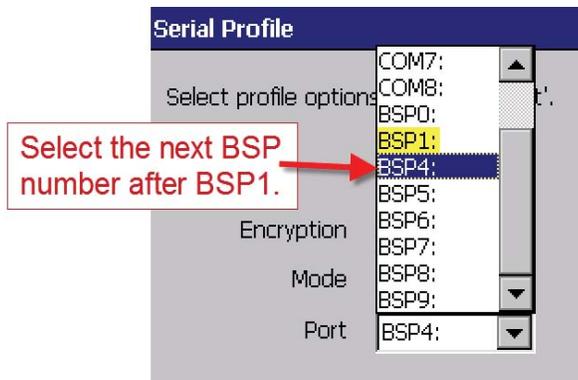

- The Serial Profile screen opens again. Tap **Next**. On the Services screen tap **Done**.

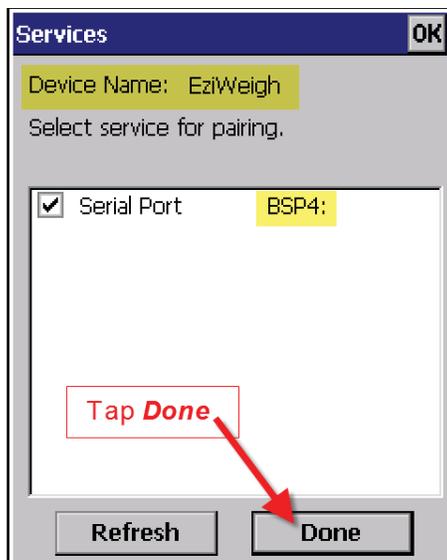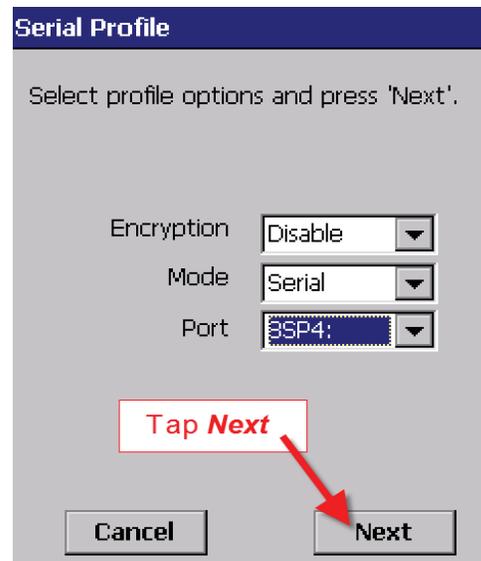


## Appendix V - Link to a weigh scale





### Set up FarmWorks on the stock recorder to receive weights from a weigh scale

1. Open FarmWorks on the stock recorder.
2. Select **Options**, then **Weigh Scale**.

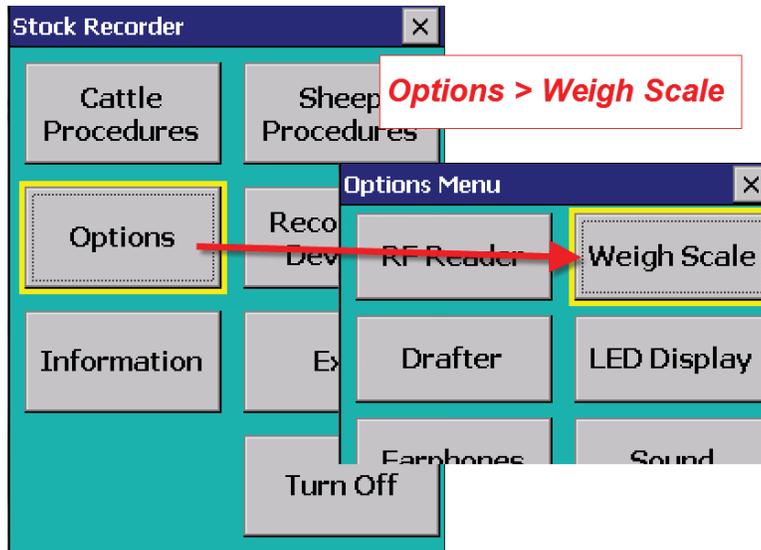

3. Select the make of your scale - **Tru-Test**, **Te Pari**, **Gallagher (SS500)** or **Reliable (RScale)**
4. Select the correct Bluetooth port number - the BSP number from the Bluetooth Manager.
5. Click backwards and forwards using the **Back** and **Next** buttons until you find the right BSP number.

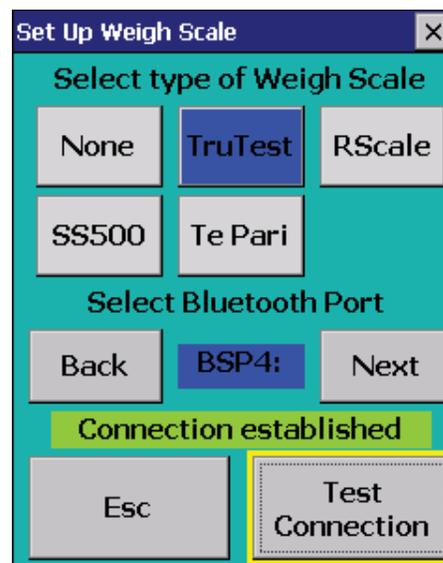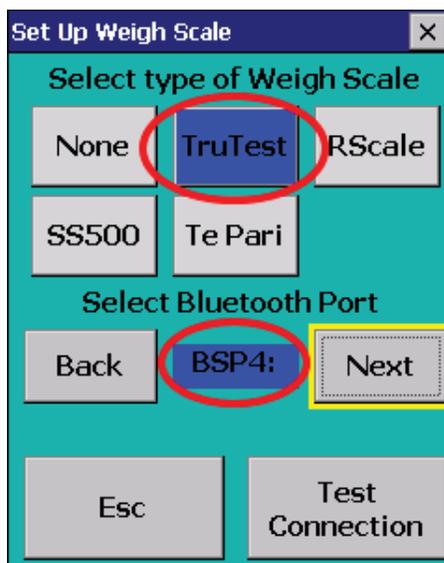

6. Tap **Test Connection**. The message **Connection Established** means the stock recorder and your weigh scale have been successfully connected. Press **Esc** to exit.
7. Open **Sheep Procedures > Weighing** and select a weighing session.
8. Put the first animal in the weigh crate. Scan the RFID tag and the scale will send the weight to the appropriate field.